

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

\* Please make sure that you have all parts indicated before you begin assembly of this item

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly





 
 
 



\* This item may require periodic tightening



# SAFAVIEH


## OUTDOOR

### Part List and Hardware List

 PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame		1X
B	Leg Frame		2X
C	Back frame		1X
D	Cross bar of leg		1X
E	Screw -1	 6x60mm	3X
H1	Allen bolt L	 6x70mm	2X
H2	Allen bolt L	 6x50mm	5X
H3	Horizontal spread		2X
H4	Allen key		1X
H5	Screw -2	 6x35mm	1X

Model# PAT7005

 Product Dimensions:50.39" W x 23.62" D x 30.31" H

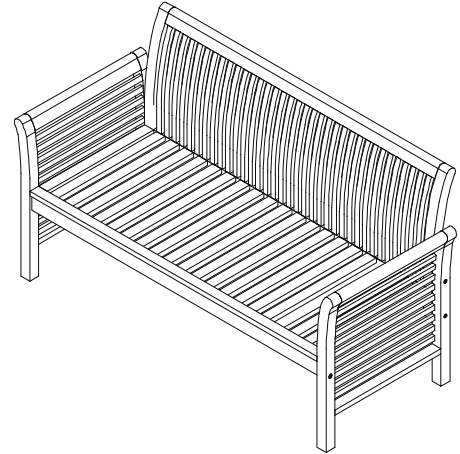


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

 
1

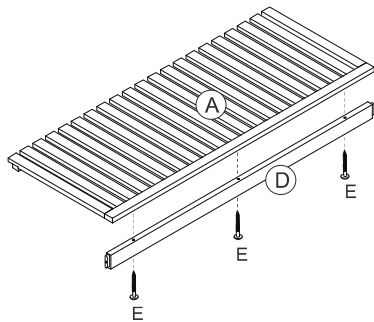

2

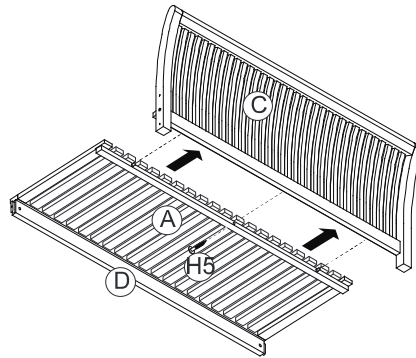 

3

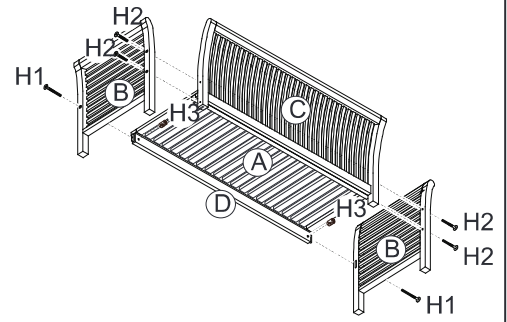 

### Step 1

Attach seat frame (A) to cross bar of leg (D), use screws (E) and tighten with allen key (H4).

### Step 2

Connect back frame (A) with seat frame (C) as arrow direction.

### Step 3

Attach leg frame (B) to back frame (A), use allen bolts (H2), tighten with allen key (H4). Attach leg frame (B) to seat frame (C), use allen bolts (H1) & horizontal spread (H3), tighten with allen key (H4).

CARE AND MAINTENANCE







 
 

Store outdoor furniture indoors or cover well when not in use.  
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum  
Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening




Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame		1X
B	Leg Frame		2X
C	Back frame		1X
D	Cross bar of leg		1X
E	Screw	 6x60mm	2X
H1	Allen bolt L	 6x60mm	2X
H2	Allen bolt L	 6x50mm	5X
H3	Horizontal spread		2X
H4	Allen key		1X

Model# PAT7005

 Product Dimensions:24" W x 23.62" D x 30.31" H

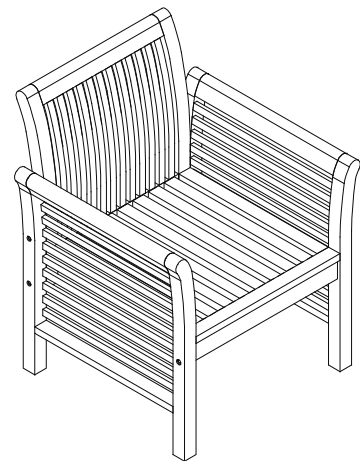


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

 
1

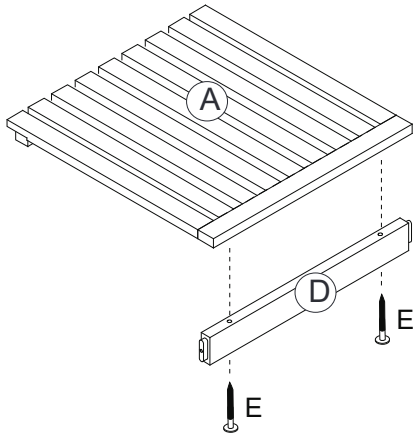

2

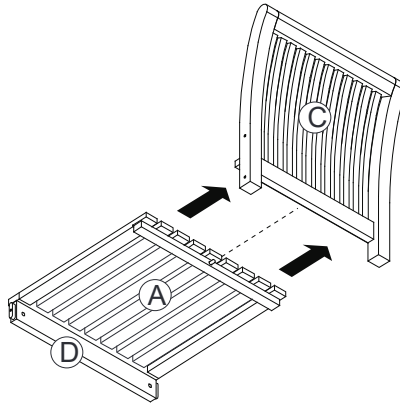 

3

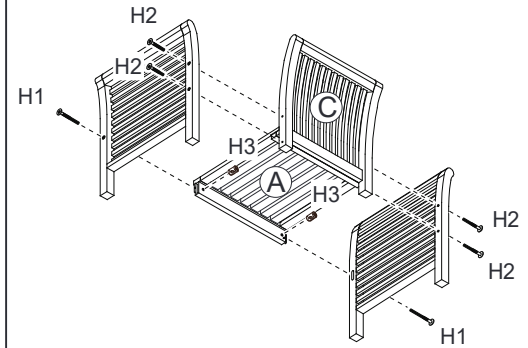 

### Step 1

Attach seat frame (C) to cross bar of leg (D), use screws (E) and tighten with allen key (H4).

### Step 2

Connect back frame (A) with seat frame (C) as arrow direction.

### Step 3

Attach leg frame (B) to back frame (A), use allen bolts (H2), tighten with allen key (H4). Attach leg frame (B) to seat frame (C), use allen bolts (H1) & horizontal spread (H3), tighten with allen key (H4).

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum




 

 
 


Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

 


### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Frame table		1X
B	Short frame		2X
C	Log frame		2X
D	Butter		4X
E	Leg		4X
F	Allen bolt L1	 8x60mm	4X
H1	Allen bolt L2	 6x60mm	12X
H2	Washer		4X
H3	Allen key		1X

Model# PAT7005

Product Dimensions:19.68" W x 31.39" D x 15.75" H

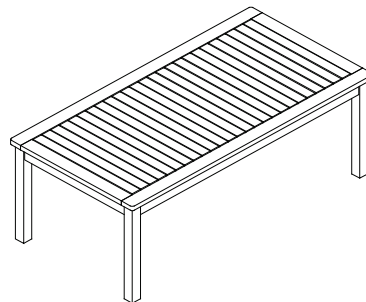


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

 
1

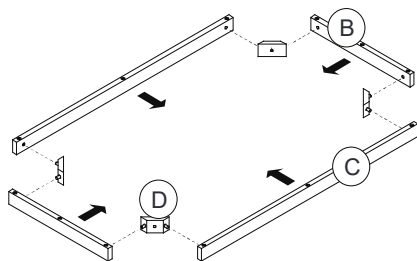

**Step 1**  
Attach B,C,D the arrow

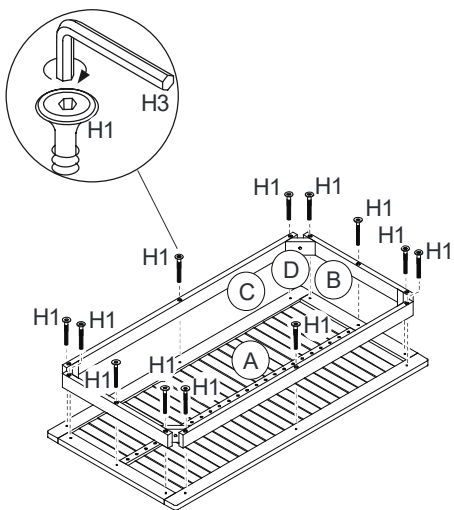 

 **Step 2**  
Attach B,C,D to A and using H1 tighten with allen key H3.

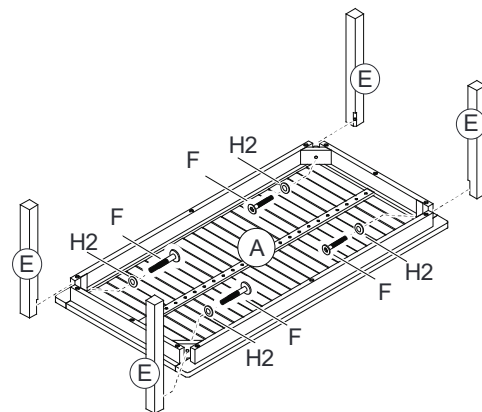

**Step 3**  
Attach E to A and using F tighten with allen key H3.