



OWNER'S MANUAL

WITH ASSEMBLY INSTRUCTIONS

REGISTER YOUR PRODUCT ONLINE AT WWW.LIFETIME.COM

At Lifetime, we are committed to providing innovative and quality products. While registering, you will have the opportunity to give us your feedback. Your input is valuable to us.

- You can also opt in to receive new product notifications or promotions.
- In the unlikely event of a product recall or safety modification, your registration provides the information we need to notify you directly.
- Registration is fast, easy, and completely voluntary.


Lifetime's Promise to You:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

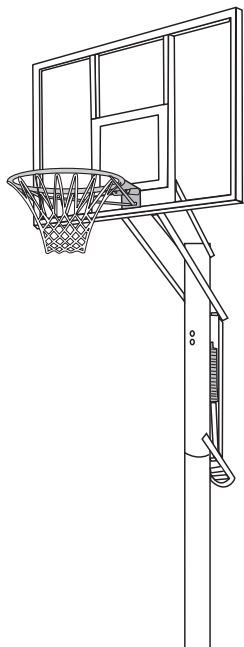

WORLD CLASS® POWER LIFT® BASKETBALL SYSTEM MODEL #71281



WARNING



To ensure your safety, do not attempt to assemble this system without reading and following **all** instructions carefully. Identify and inventory the parts using the Parts List. Failure to comply with any of the warnings in these instructions may result in serious personal injuries such as cuts, broken bones, nerve damage, paralysis, brain injury, or death. Failure to comply may also result in property damage. Please heed all warnings and cautions.

****U.S. and Canada customers ONLY****

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!!!

CALL OUR CUSTOMER SERVICE DEPARTMENT at **1 (800) 225-3865**

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)

****Call or visit our Web site for Saturday hours****

****For customers outside the U.S. or Canada, please contact the store for assistance.****

INSTRUCTION #1039804 E

5/04/2012

POLE SECTION IDENTIFICATION

Identify the pole sections before beginning assembly. Failure to assemble the pole sections correctly may result in severe personal injury or property damage as described on Page Two.

ONCE THE POLE SECTIONS HAVE BEEN SEATED, THEY CANNOT BE SEPARATED.

Note: Tapers and flares are exaggerated in the illustrations.



Top Pole:

Four holes at the top of the pole, four holes in the middle, two holes near the bottom and two small holes at the bottom.

TP



Middle Pole:

One slot at the top of the pole and two small holes at the bottom. Warning Sticker.

MP



Bottom Pole:

Two slots at the top of the pole and dimples at the bottom.

BP



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

- If using a ladder during assembly, use extreme caution.
- Three capable adults are recommended for this operation.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play.
- Before digging, contact utility company to locate underground power cables, gas, and water lines. Ensure that there are no overhead power lines within 20 ft. (7m) radius of pole location.
- Minimum operational height is 7'6" (2.23m) to the rim.







Most injuries are caused by misuse and/or not following instructions. Use caution when using this system.

PARTS LIST

ID	Part #	Description	Qty	✓
TP	1018602	Top Pole	1	<input type="checkbox"/>
MP	1018603	Middle Pole	1	<input type="checkbox"/>
BP	1018866	Bottom Pole	1	<input type="checkbox"/>
RB	1018718	Right Backboard Bracket	1	<input type="checkbox"/>
LB	1018717	Left Backboard Bracket	1	<input type="checkbox"/>
AA	500096	Pole Cap	1	<input type="checkbox"/>
AB	502005	Net	1	<input type="checkbox"/>
AC	502027H	Adjustment Handle	1	<input type="checkbox"/>
AD	502049G	Trigger	1	<input type="checkbox"/>
AF	502056	Plastic Guard	1	<input type="checkbox"/>
AJ	700506	Wood Block	1	<input type="checkbox"/>
AK	CA00899	Zip Tie	2	<input type="checkbox"/>
AL	1018876	Spring Bracket	1	<input type="checkbox"/>
AM	HA00800	Gas Spring	1	<input type="checkbox"/>
AN	1018869	Short Extension Arm	2	<input type="checkbox"/>
AO	1018836	Long Extension Arm	2	<input type="checkbox"/>
AP	1018837	Rear Lifter Arm	2	<input type="checkbox"/>
AQ	ZA10199	Bellows	1	<input type="checkbox"/>
AR	1025107	Backboard	1	<input type="checkbox"/>
AS	825608	Rim	1	<input type="checkbox"/>
	FS16500	Warning Sticker (Applied)	1	<input type="checkbox"/>
AU	604084	Height Sticker	1	<input type="checkbox"/>
FC	CB08999	Corner Frame Pad	2	<input type="checkbox"/>
FM	1000841	Center Frame Pad	1	<input type="checkbox"/>
XX	DA01500D	Pole Pad	1	<input type="checkbox"/>
Pole Joint Hardware (1005748)				
PA	BS02000	1/4" x 3/4" Screw	2	<input type="checkbox"/>
PB	1004620	Self-Tapping Screw	2	<input type="checkbox"/>
Rim Hardware (1012253)				
RA	300066	5/16" Hex T-Nut	2	<input type="checkbox"/>
RC	302014	5/16" Flat Washer	2	<input type="checkbox"/>
RD	302056	7/16" Rubber Washer	2	<input type="checkbox"/>
RE	302060	5/16" x 2 1/2" Tap Bolt	2	<input type="checkbox"/>
RF	302079	4.86" U-Bolt	1	<input type="checkbox"/>
RG	302090	5/16" Nylock Flange Nut	4	<input type="checkbox"/>
RH	1001137	Compression Spring	2	<input type="checkbox"/>
RI	804033	Spring Retainer Plate	1	<input type="checkbox"/>
RK	300128	5/16" Jam Nut	2	<input type="checkbox"/>

HARDWARE IS ACTUAL SIZE

(Unless otherwise indicated)

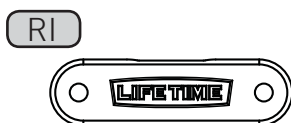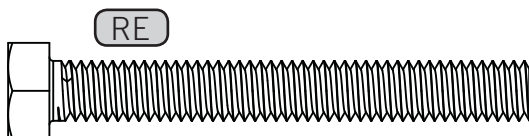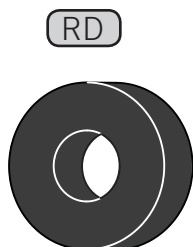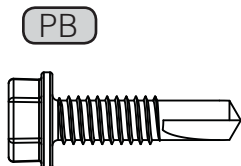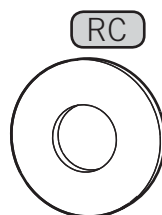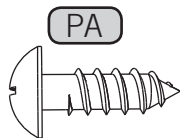

(Not actual size)



****A MINIMUM OF TWO ADULTS ARE REQUIRED FOR ASSEMBLY****

TOOLS AND MATERIALS REQUIRED FOR ASSEMBLY


(Not Included)

- | | |
|---|------------------------------|
| 1. Concrete Mix
(at least six 90-lb. bags) | 10. 9/16" Wrenches (2) |
| 2. Water Supply | 11. 3/4" Wrenches (2) |
| 3. Pencil or Marker | 12. 7/16" Wrenches (2) |
| 4. Ladder | 13. Tape Measure |
| 5. Shovel | 14. 3' Length of Rebar |
| 6. Hammer or Mallet | 15. Phillips Screwdriver |
| 7. Carpenter's Level | 16. Scissors or Wire Cutters |
| 8. Adjustable Wrench | 17. Pliers |
| 9. 1/2" Wrenches (2) | 18. Ruler or Straight Object |
| | 19. Electric Drill |


PARTS LIST

ID	Part #	Description	Qty	✓
Main Hardware (1039829)				
MA	300022	1/4" Centerlock Nut	2	<input type="checkbox"/>
MB	300029	1/2" x 7 1/8" Hex Bolt	5	<input type="checkbox"/>
MC	300031	3/8" Flat Washer	2	<input type="checkbox"/>
MD	300043	Cotter Pin	1	<input type="checkbox"/>
ME	300055	1 1/2" Metal Pin	1	<input type="checkbox"/>
MF	300110	1/4" x 2 3/4" Hex Bolt	2	<input type="checkbox"/>
MG	301008	1/2" Centerlock Nut	5	<input type="checkbox"/>
MH	302008	3/8" Centerlock Nut	2	<input type="checkbox"/>
MI	302011	5/16" x 1 1/4" Carriage Bolt	2	<input type="checkbox"/>
MJ	302053	3/8" x 4" Hex Bolt	2	<input type="checkbox"/>
MK	1028047	.38 x 1" Steel Spacer	2	<input type="checkbox"/>
RG	302090	5/16" Nylock Flange Nut	2	<input type="checkbox"/>
ML	500013	9/16" x .592" Spacer	4	<input type="checkbox"/>
MM	500015	3/8" x 1/2" Spacer	2	<input type="checkbox"/>
MN	500032	1/2" x 1/8" Spacer	4	<input type="checkbox"/>
MO	500081	Grease Packet	1	<input type="checkbox"/>
MS	800239	1/2" x 3 7/16" Spacer	2	<input type="checkbox"/>
MQ	800324	1/2" x 2 5/16" Spacer	2	<input type="checkbox"/>
MR	800331	3/4" x 3 1/4" Spacer	1	<input type="checkbox"/>
Handle Hardware (1017923)				
TA	300101	Release Pin	1	<input type="checkbox"/>
TB	302007	3/8" x 6 1/2" Hex Bolt	2	<input type="checkbox"/>
TC	300187	1/2" x 6 1/2" Hex Bolt	1	<input type="checkbox"/>
MG	301008	1/2" Centerlock Nut	1	<input type="checkbox"/>
MH	302008	3/8" Centerlock Nut	2	<input type="checkbox"/>
Frame Pad Hardware (HH00700)				
FA	BS00100	#10 x 3/4" Screw	10	<input type="checkbox"/>


MK




MF

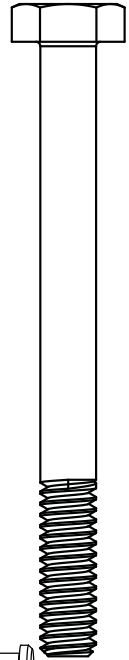


MA

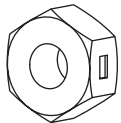

MC

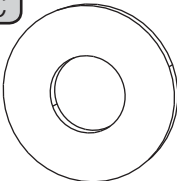


MD



(Not actual size)

ME




(Not actual size)

STOP!

Before Beginning Assembly


STOP!

- Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.
- Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or Mallet.

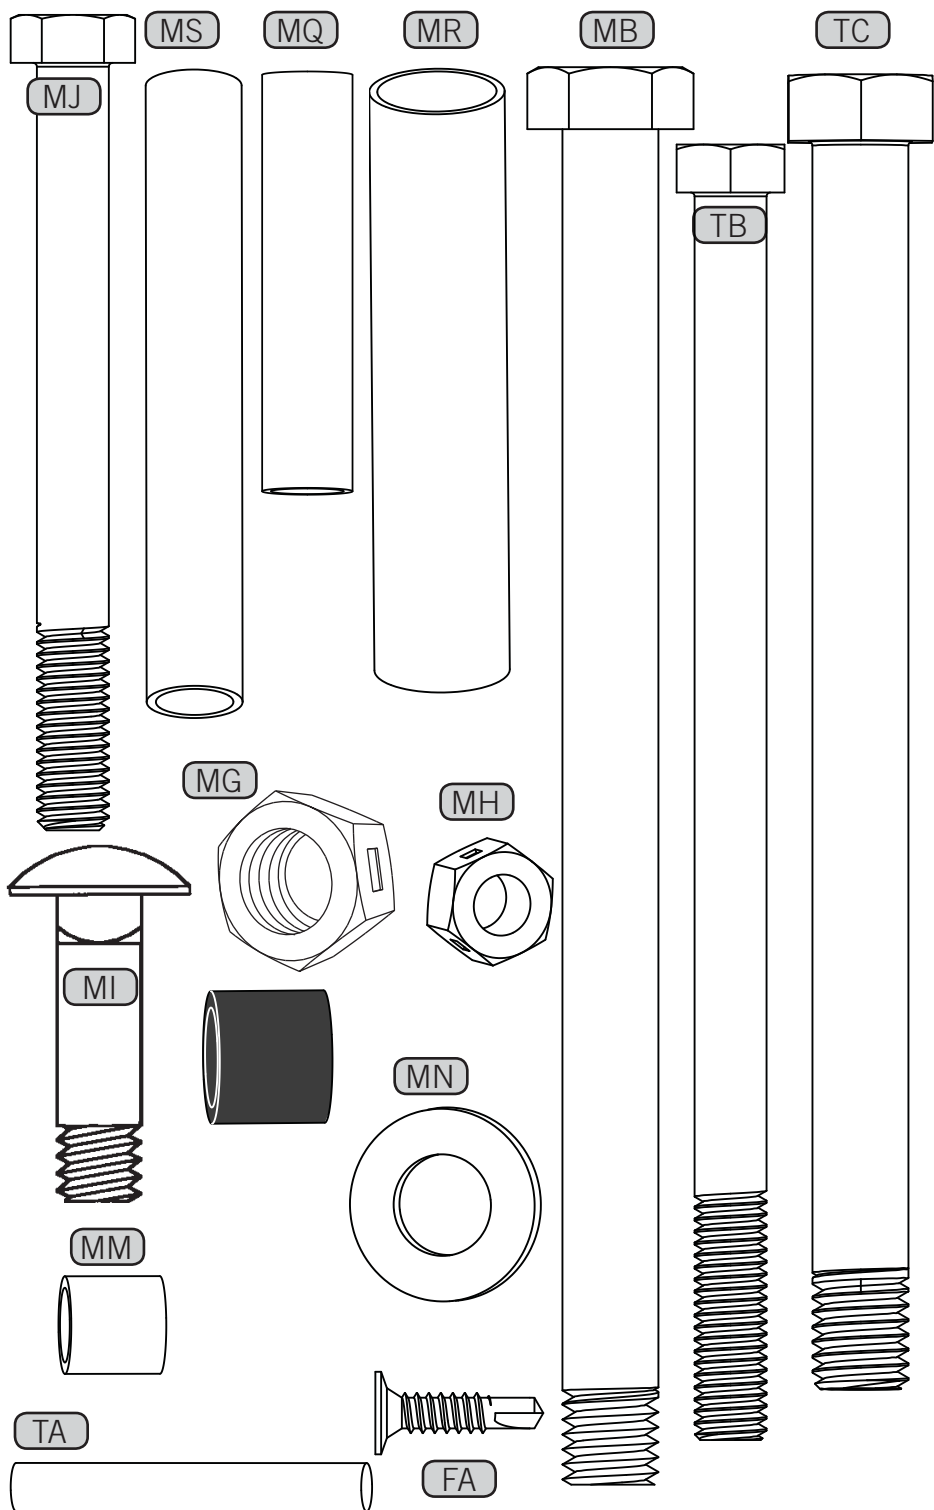


1A For a nonpermanent installation of your basketball system, a Ground Sleeve provides an alternative to cementing the pole into the ground. See Page 22 for more information.

Dig a round hole 24" deep and 18" in diameter. The edge of the hole should be flush with the edge of the playing surface.

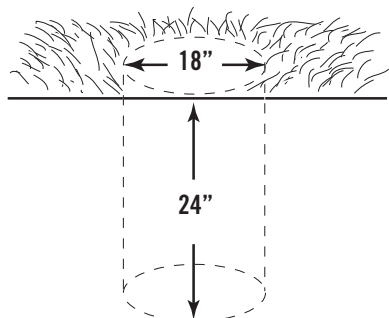

1B

Make a mark 14.5" up from the dimpled end of the Bottom Pole (BP) (do not scratch the powder coating).

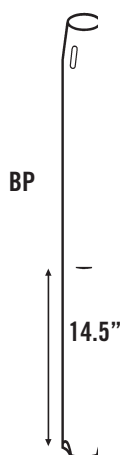


2 Mix 5 1/2 bags of concrete, following the directions on the concrete bags. Keep in mind that a thicker mix of concrete will dry stronger.


Save a 1/2 bag of concrete mix to use later in the assembly.

Fill the hole to the top with concrete.

Insert the dimpled end of the Bottom Pole into the cement up to the 14.5" mark and 4" away from the playing surface.

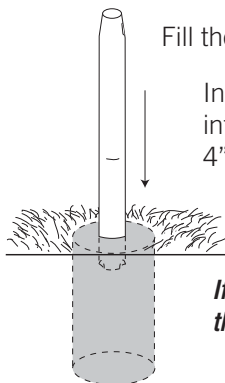


If the pole is buried too deep or too shallow, the Rim will not be at the correct height.

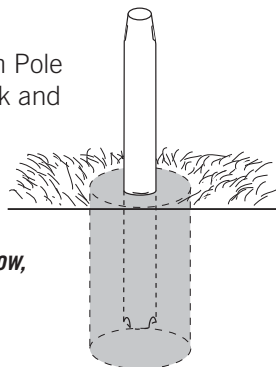

3 The slots in the Bottom Pole must be parallel to the playing surface. If necessary, insert a straight object (a ruler, wire, etc.) through the slots in the Bottom Pole. Rotate the pole until the straight object is parallel to the playing surface.


Form the cement into a downward slope away from the pole to allow water runoff. **Failure to do so may result in premature rusting of the pole.**

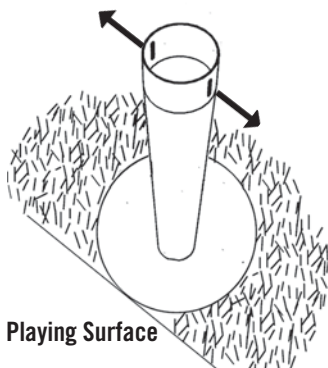

4

Place the 1/2" x 3' rebar (not included) inside the Bottom Pole (BP).

Check the pole several times within the first hour to make sure that all sides are vertical and that the pole does not sink into the concrete. The 14.5" mark must remain level with the playing surface.

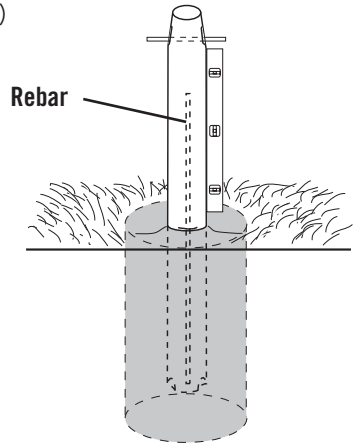

Allow 1-4 hours for the concrete to set.

Do not continue until the concrete has set for 1-4 hours.

5


Remove the straight object from the top of the pole.

Mix the remaining 1/2 bag of concrete and pour the concrete into the Bottom Pole until it is just below the slots in the top of the pole.

Do not overfill the pole, or you may not be able to assemble the rest of the pole sections.

Tamp the concrete down in the Bottom Pole with a broom handle to remove any air pockets.

Clean all excess concrete off the outside surface of the pole.

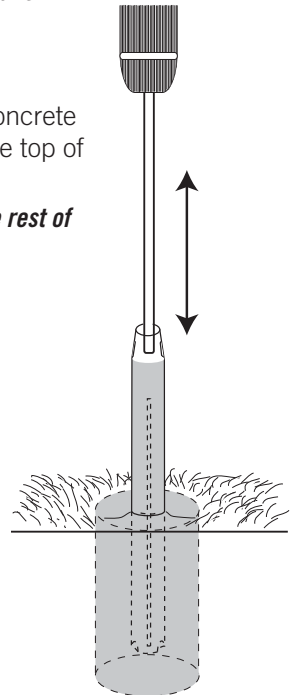


STOP!

The concrete must cure for at least **72 hours (3 days)** before installing the rest of the system. In humid climates or wet weather, allow additional time for the concrete to cure. Do not proceed until the curing process is complete.

Required For This Page:


9/16" Wrenches




Screwdriver

1005748

PA
(1)



MC
(2)

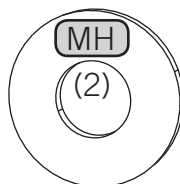

1039829


MS (2)



MJ (2)





6

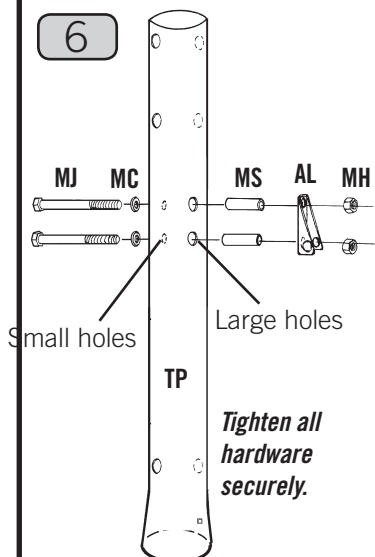

7

Apply the Height Sticker (AU) so it wraps around the opposite side of the pole as the Spring Bracket (AL).

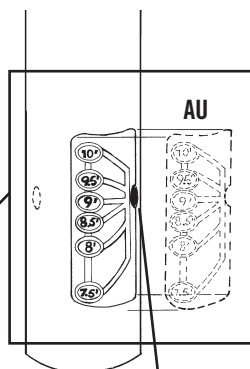


The small notch in the Sticker fits around the hole in the pole.

8

Align the hole in the Top Pole (TP) with the slot in the Middle Pole (MP) and slide the Top Pole over the Middle Pole.

Do not jam the poles together until instructed.

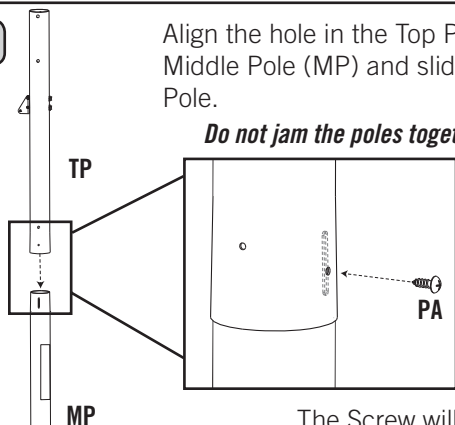

Insert a 1/4" x 3/4" Screw (PA) through the small hole in the Top Pole and into the Middle Pole.


The Screw will spin freely once installed.

Note: There are two screw holes at the bottom of the pole. The correct hole will be slightly larger and slightly lower on the pole.

Required For This Page:


Screwdriver

1005748



PB

(1)



9A

This step cannot be reversed.

In order to seat the poles, strike each end of the pole very hard 5 to 6 times on a piece of scrap wood or cardboard. This must be done even if the poles cover the slots before seating.

If the Top Pole does not completely cover the slot on the Middle Pole after seating, DO NOT COMPLETE ASSEMBLY. Call our Customer Service Department.


Do not hit your feet with the pole sections, as serious injury could occur.



WARNING





The poles must be seated together!! Even if the poles cover the slots before seating, you must strike them hard on the wood five to six times!! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage as listed on Page Two.

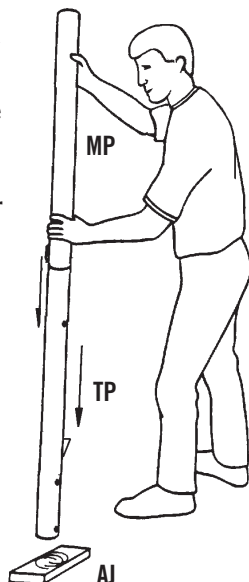


9B

Insert the Self-tapping Screw (PB) directly into the chuck of the Electric Drill and screw it into the Poles at the location shown.

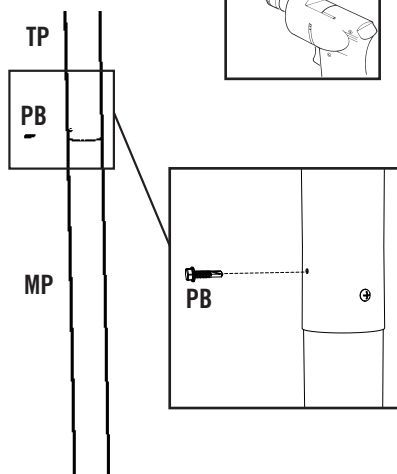

10

The bottom of the Bellows (AQ) overlaps the Gas Spring (AM) by 1". The top is 1/2" from the top of the Spring.

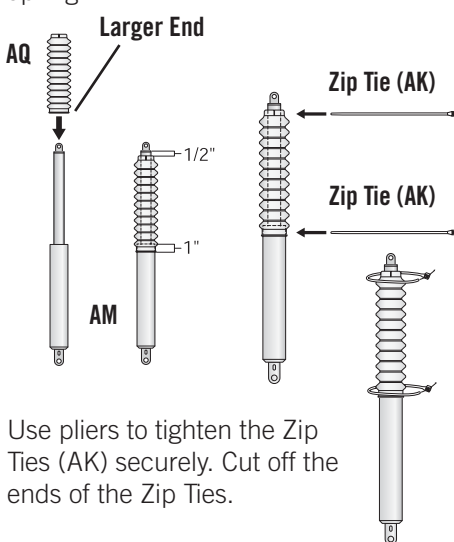

Use pliers to tighten the Zip Ties (AK) securely. Cut off the ends of the Zip Ties.


Required For This Page:

3/4" Wrenches




Pliers 1017923

MG
(1)

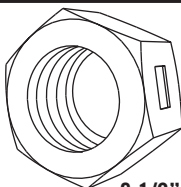



1039829

MD (1)



(Not actual size)

ME (1)

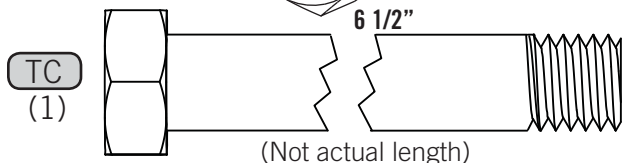


11

Line up the Rear Lifter Arms (AP) with the Gas Spring (AM).





AP

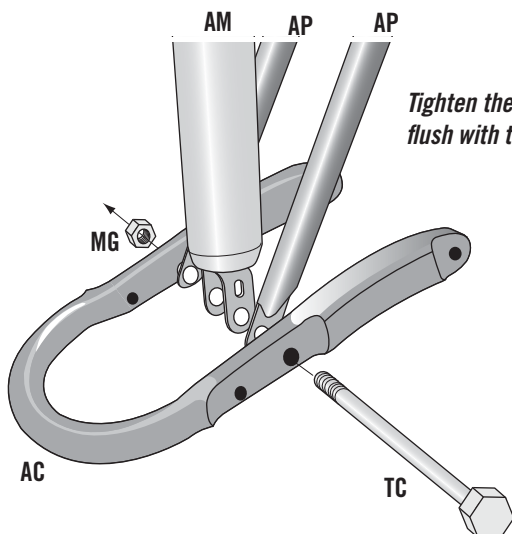

Tighten the Nut until it is flush with the Bolt.

12

TP

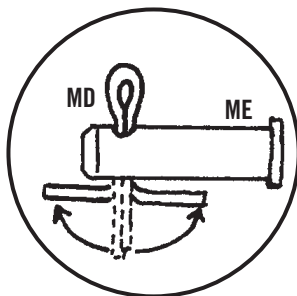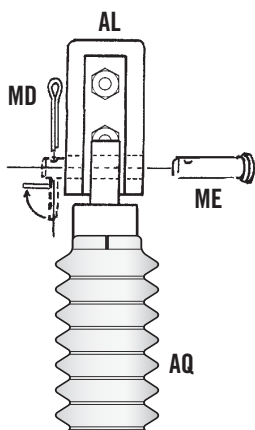

Use pliers to bend the Cotter Pin (MD) as shown above.


Required For This Page:

9/16" Wrenches




1017923

TA (1)



6 1/2"



(Not actual length)

MH


(2)



1039829


MM

(2)




13

Tighten the Nut until it is flush with the Bolt.

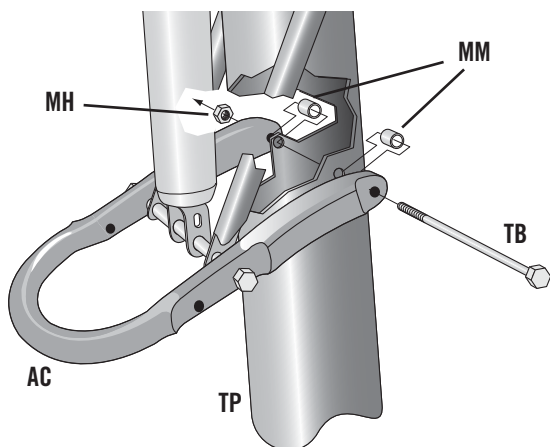


14

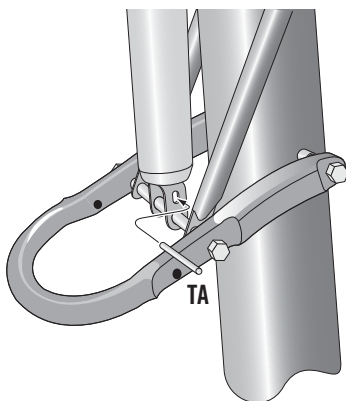


15

The Release Pin (TA) should fit into the channels in the Trigger (AD).

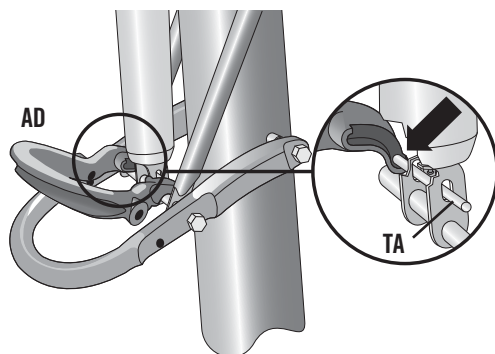

16

Tighten the Nut until it is flush with the Bolt.

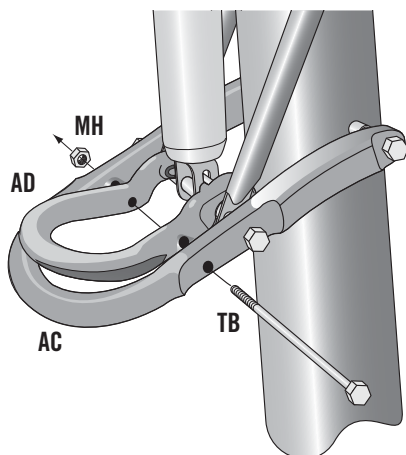

Required For This Page:

7/16" Wrenches



1/2" Wrenches




1039829





MF (2)


RC (2)

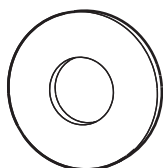

RD (2)

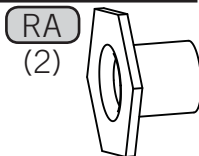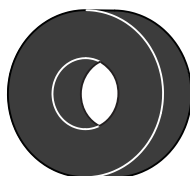


RE (2)



1012253


17

Hold the Backboard Brackets (LB & RB) together.

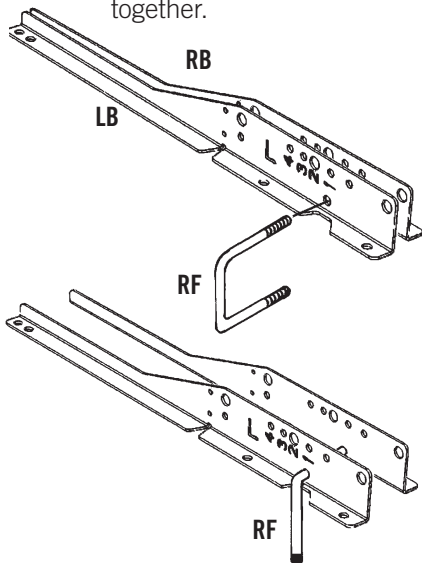


18

Make sure the U-Bolt (RF) is in the notches.

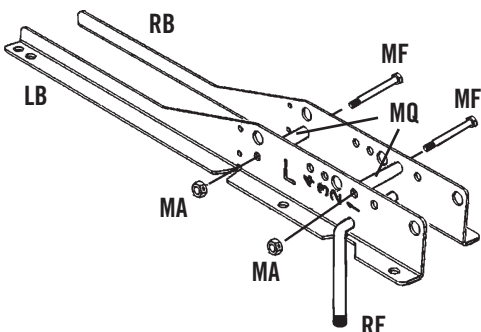


Completely tighten the Nuts (MA).



19

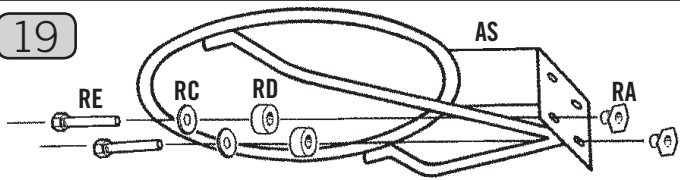

The Tap Bolts (RE) should be at the outer edge of the holes.

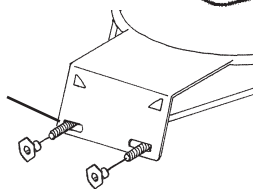

Tighten the T-Nuts (RA) only until the Rubber Washers (RD) begin to bulge.

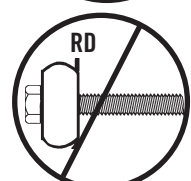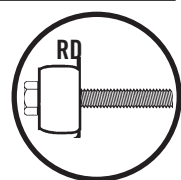

Required For This Page:

1/2" Wrenches




1012253

1039829



RG (4)

RK (2)



RI (1)



(Not actual size)




MK (2)

20


Slide a Spacer (MK) over each Tap Bolt (RE) between the Backboard and the Backboard Brackets.

*Only hand tighten the
Nylock Flange Nuts (RG).*

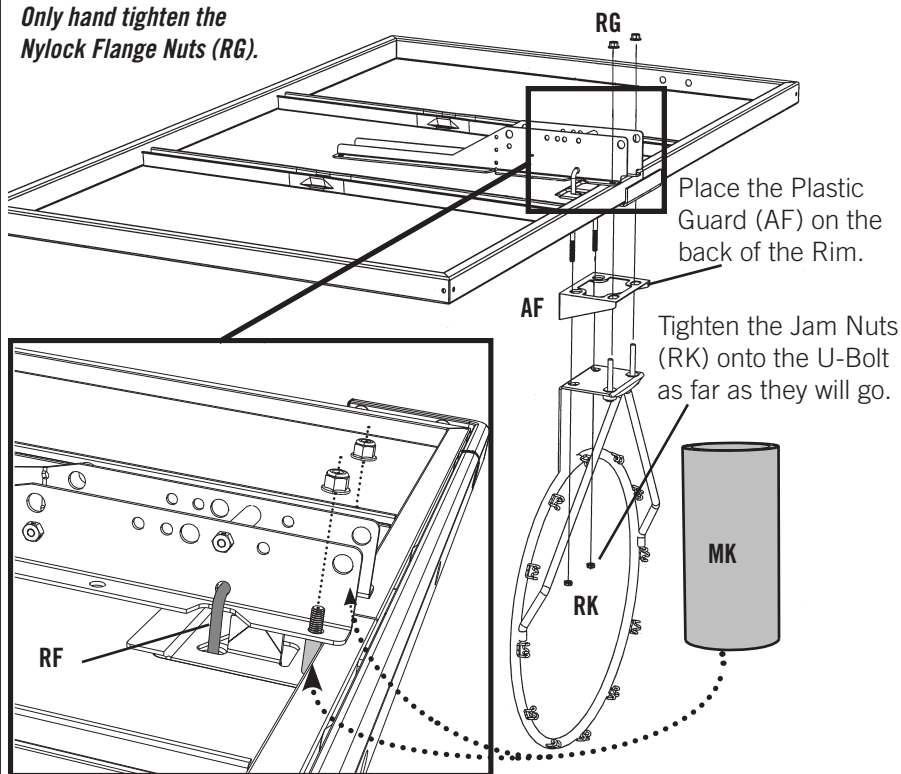

21

Tightening these Nuts (RG) will
adjust the Rim tension.

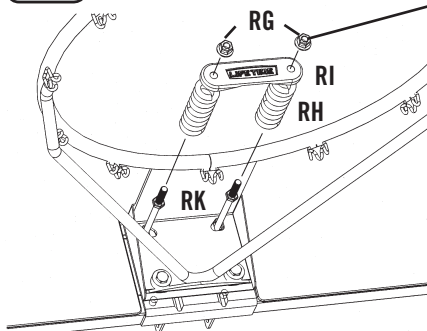


*Only hand tighten the Nylock Flange Nuts
(RG).*

Required For This Page:

1/2" Wrenches



Electric Drill
1039829

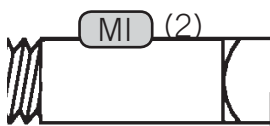


RG
(2)




HH00700

FA (8)




22

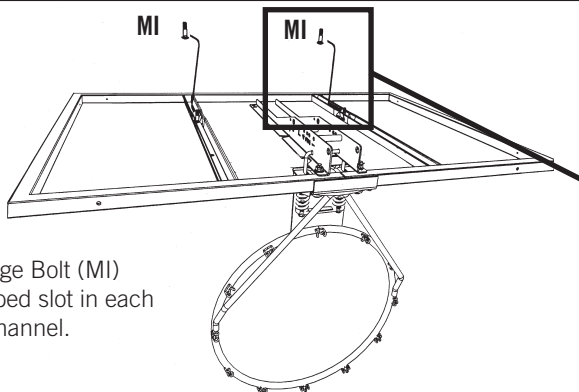


Slide a Carriage Bolt (MI)
into the crimped slot in each
Backboard channel.

23

Bend the Backboard Brackets (LB & RB) out.

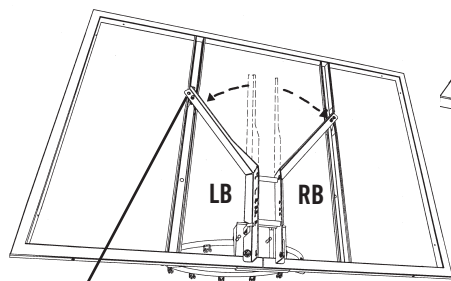

The lower holes should go
over the Carriage Bolts.



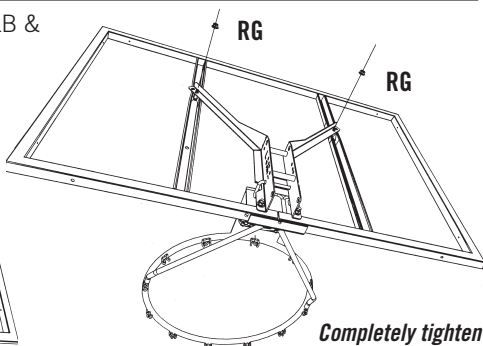


*Do not overtighten the Nuts (RG).
Completely tighten all Rim hardware.*

24

Remove the plastic film from the **Backboard**. The lip of the **Frame Pad** overlaps the front of the **Backboard**.

Attach the Center Frame Pad (FM) first. Align the small line in the back of the Center Frame Pad with the seam in the Backboard frame.

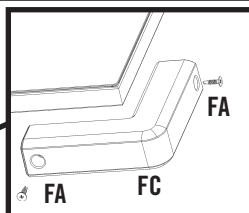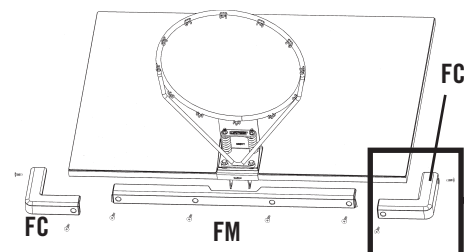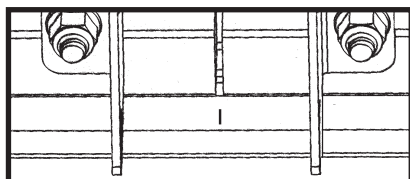

Use an
Electric
Drill to
insert the
Screws.


Required For This Page:

3/4" Wrenches




1039829


ML
(4)

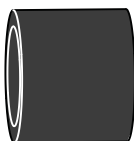


MG
(2)

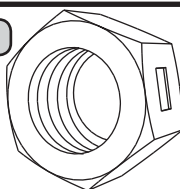

MB
(2)

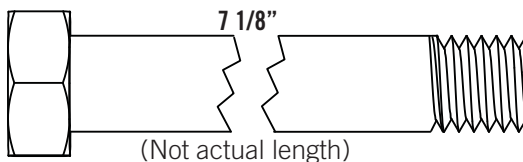

25

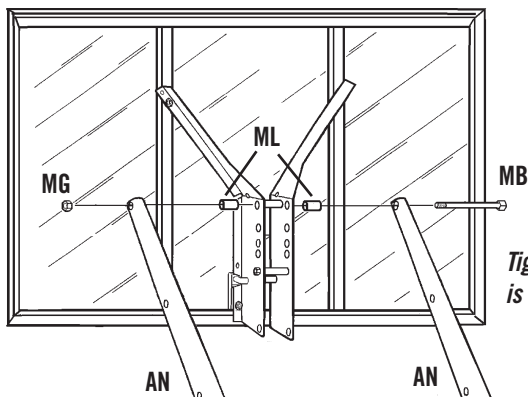


AN




Tighten the Nut until it is flush with the Bolt.

26

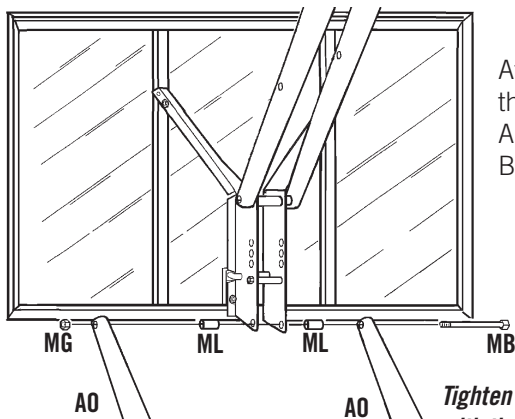

Attach this end of the Long Extension Arms (AO) to the Backboard Brackets


AO



Tighten the Nut until it is flush with the Bolt.

27

The Backboard and Rim must rest on cardboard to prevent scratching.

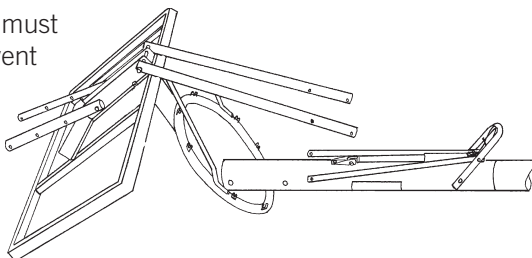


Required For This Page:

3/4" Wrenches




1039829


MG
(2)

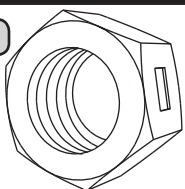


MN
(2)

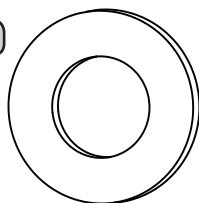

MB
(2)

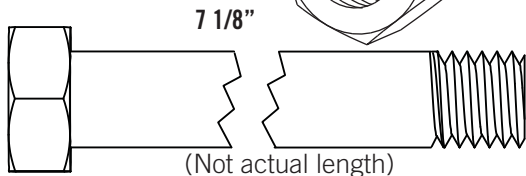


MR
(1)

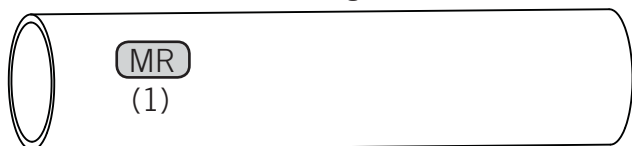


28

Lift the pole up until the Long Extension Arms (AO) line up with the Rear Lifter Arms (AP).

The Rear Lifter Arms must be on the *inside* of the Extension Arms.

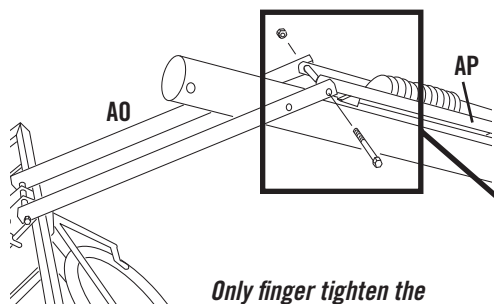


Only finger tighten the Nut.

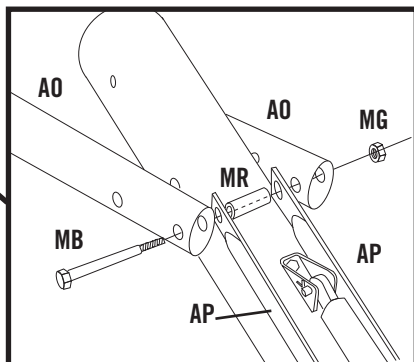


29

There must be a 1/2" x 1/8" Spacer (MN) between each Long Extension Arm (AO) and the pole.

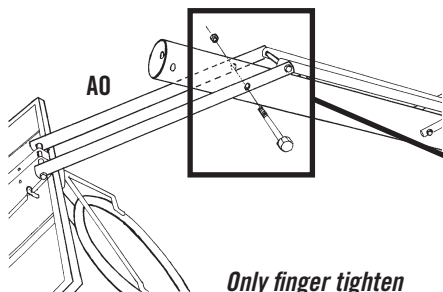

Only finger tighten the Nut.

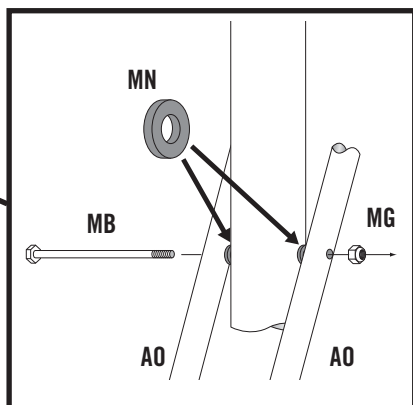


Required For This Page:

3/4" Wrenches




1039829


MG
(1)

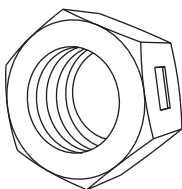

MN
(2)


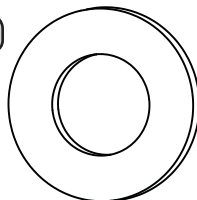


MB
(1)

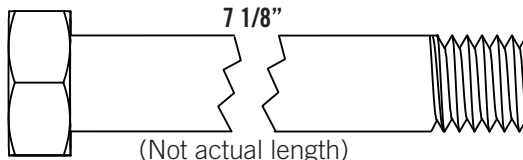

30


There must be a 1/2" x 1/8" Spacer (MN) between each Short Extension Arm (AN) and the pole.

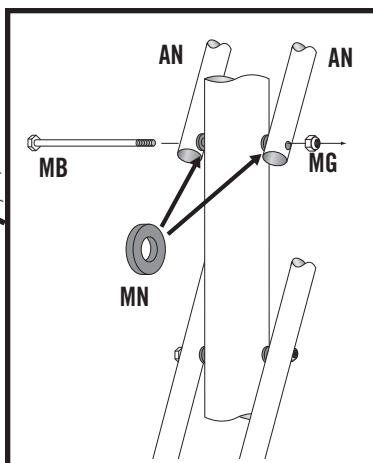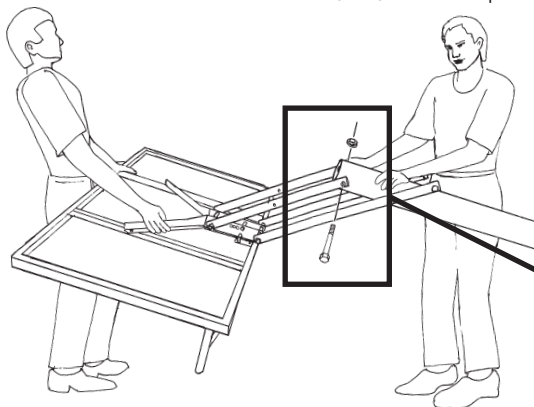

Completely tighten the Nuts from steps 29 through 31.

31


Attach the Net (AB).

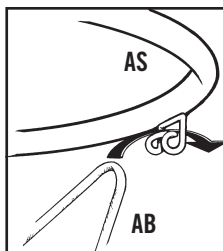

Please call our Customer Service Department at the number on Page Two to obtain replacement Nets. Our Nets are shorter than average to reduce the risk of entanglement.

32

Apply Grease (MO) to these areas.

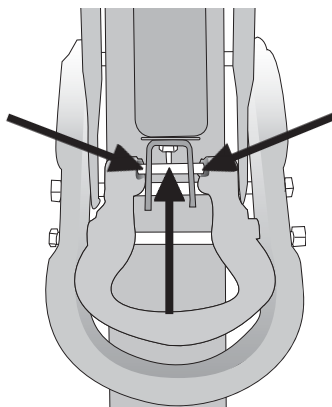


33

CAUTION: When compressing the Gas Spring, use extreme caution to prevent the pole from extending.

Slowly lift the pole and rotate the Backboard assembly upside down again.

Grasp the Handle and Trigger as shown. Squeeze the Trigger and push down on the pole to compress the Gas Spring.

Release the Handle before letting go of the pole.

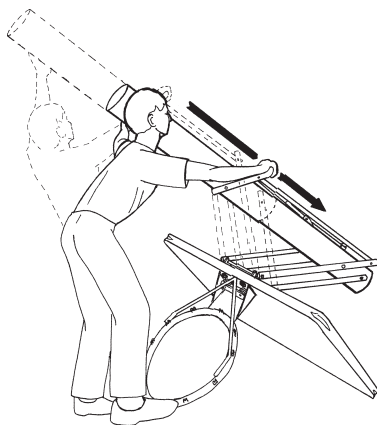

WARNING



The poles must be seated together!! Even if the pole covers the slot before seating, you must strike them on the wood five to six times!! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage as listed on Page Two.



WARNING



Use extreme caution when standing on ladders to perform assembly steps. Follow all warnings and cautions on the ladder carefully. Failure to follow all of these instructions and warnings could lead to serious injuries or property damage as listed on Page Two.

Operation of the height adjustment system

The adjustable system may be adjusted from 7 1/2 feet to 10 feet.

Hold the Handle tightly and squeeze the Trigger to engage the Gas Spring. Raise the Handle to lower the Backboard, or lower the Handle to raise the Backboard.

Required For This Page:

Screwdriver



Hammer/Mallet

1005748

PA
(1)



PB (1)



34

****AT LEAST 2 ADULTS REQUIRED FOR THIS STEP****

Make sure the Backboard faces the playing surface and align the small hole in the Middle Pole (MP) with the correct slot in the Bottom Pole (BP). Slide the Middle Pole over the Bottom Pole.



Insert the remaining 1/4" x 3/4" Screw (PA) through the small hole in the Middle Pole and into the Bottom Pole.


The Screw will spin freely once installed.

Note: There are two screw holes at the bottom of the pole. The correct hole will be slightly larger and slightly lower on the pole.


Place the Wood Block (AJ) on top of the pole and strike with a hammer six or seven times.

If the Middle Pole does not completely cover the slot on the Bottom Pole after seating, DO NOT COMPLETE ASSEMBLY. Call our Customer Service Department.



Insert the Pole Cap (AA) into the pole.

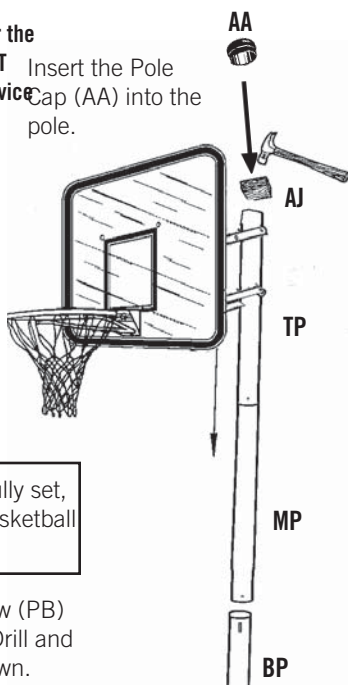

To ensure that the concrete can fully set, do not play aggressively on your basketball system for a week.

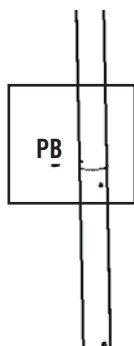


Insert the remaining Self-tapping Screw (PB) directly into the chuck of the Electric Drill and screw into the Pole at the location shown.

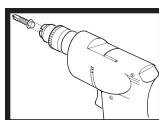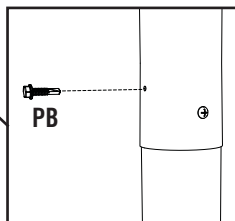

35

Attach the **Pole Pad (XX)** to the Pole with the top strap above the handle as shown.

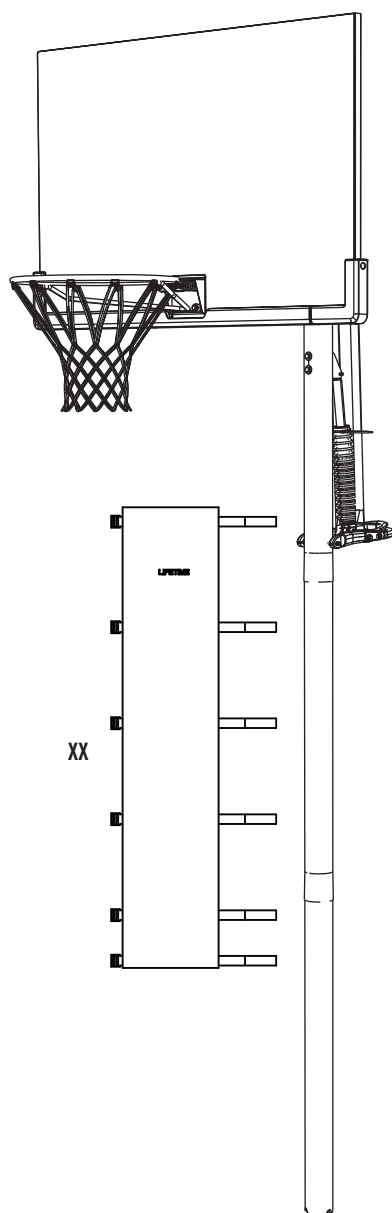

POLE CARE AND SYSTEM MAINTENANCE


The life of your basketball system depends on many variables. The climate, exposure to corrosives such as salt, pesticides, or herbicides, and excessive use or misuse can all contribute to pole failure, which may cause property damage or personal injury.

Check your basketball system frequently for loose hardware, excessive wear, and signs of corrosion. For safety reasons, and to prolong the life of your basketball system, you **must** take the following preventive measures.

- a. Check all Nuts and Bolts. If any are loose, tighten them.
- b. Check all parts for excessive wear and tear. If necessary, replace any parts that have been worn or damaged through usage. Check the Pole Cap for cracks or tears that could let water into the pole. Contact our Customer Service Department for replacement parts.
- c. Inspect the Warning Sticker on the pole. If it is ripped, faded, or illegible, call our Customer Service Department to request a replacement Sticker.
- d. Check all pole sections for visible rust or chipped or cracked paint. If either are present, do the following:
 1. Use an emery cloth to completely remove any rust or chipped paint.
 2. Clean the area with a damp cloth and allow it to dry.
 3. Apply two coats of a rust preventative, high gloss enamel paint to the area. Allow the paint to dry between coats.

IF RUST HAS PENETRATED THROUGH THE POLE ANYWHERE, REPLACE IT IMMEDIATELY!

ACCESSORIES AVAILABLE FOR MORE BASKETBALL FUN!

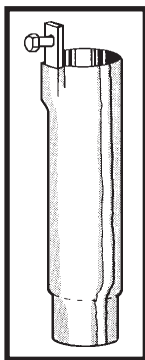

PRODUCT DESCRIPTION MODEL # _____ Intermediate

Size Basketball 594201 Universal Ground
Sleeve 0023

Contact Customer Service at the number on
Page Two for prices and freight cost.

Universal Ground Sleeve #0023

The Universal Ground Sleeve enables the pole to be cemented in, yet still removable. The sleeve sits flush with the ground after installation. Fits 3.5" diameter poles.

***Only clean the Backboard with the approved cleaning materials
listed below:***

Windex ¹	Fantastik ³
Joy ²	Formula 409 ⁴
Mr. Clean ²	

The use of other chemicals will void the warranty.

¹Registered Trademark of the Drackett Products Company.

²Registered Trademarks of Procter & Gamble.

³Registered Trademark of Texize, Division of Norton Norwich Products Inc.

⁴Registered Trademark of the Clorox Company.

NOTES:

NOTES:

NOTES:



WARNING



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE.

Owners must ensure that all players know and follow these rules for safe operation of the system.

- Only hang from the rim briefly to regain balance or avoid injuring others. Release the rim as soon as safely possible.
- During play, especially when performing dunk type activities, keep player's face away from the backboard, rim, and net. Serious injury could occur if teeth/face come in contact with the backboard, rim, or net. Player should wear a mouth guard during play.
- Do not slide, climb, or play on pole.
- When adjusting height or moving system, keep hands and fingers away from moving parts.
- Do not allow children to move or adjust system.
- Do not wear jewelry (rings, watches, necklaces, etc.) during play. Objects may entangle in net.

- Keep organic material away from pole base. Grass, litter, etc. could cause corrosion and/or deterioration.
- Once a month check pole and all metal parts for signs of corrosion (rust, pitting, chipping). Completely remove rust and repaint with exterior enamel. If rust has penetrated any steel part, replace that part immediately.
- Check system before each use for loose hardware, excessive wear, instability, and signs of corrosion and repair before use.
- Never play on damaged equipment.
- Do not use the system to lift or hoist anything. The mechanism is designed to lift only the weight of the backboard and rim. Do not hang anything from the handle, rim backboard, or lifter arms as this will damage the system and void the warranty.



ADVERTENCIA



AVERTISSEMENT



SI NO SE OBEDECEN ESTAS ADVERTENCIAS PUEDEN PRODUCIRSE GRAVES LESIONES Y/O DAÑOS A LA PROPIEDAD.

El propietario del sistema debe asegurarse de que todos los jugadores conozcan y respeten estas reglas para que el sistema se use en forma segura.

- Cuélguese del aro sólo en forma breve, para recuperar el equilibrio o evitar lesionar a otros jugadores. Súltese del aro lo más pronto que pueda hacerlo con seguridad.
- Durante el juego, especialmente al embocar violentamente de alto, la cara de los jugadores debe mantenerse alejada del tablero, el aro y la red. Los jugadores deben usar un protector bucal durante el juego.
- No se deslice, no trepe ni juegue sobre el poste.
- Mantenga las manos y los dedos alejados de las piezas móviles cuando regule la altura del sistema.
- No deje que los niños regulen el sistema.
- No use joyas (anillos, relojes, collares o gargantillas, etc.) durante el juego. Estos objetos pueden engancharse en la red.
- No permita que la base del poste entre en contacto con materiales orgánicos. El pasto, los desechos animales, etc., pueden causar corrosión y/o deterioros.
- Controle el poste y todas las piezas metálicas una vez al mes en busca de signos visibles de corrosión (oxidación, picaduras, escamado). Elimine todo rastro de óxido y vuelva a pintar con esmalte para exteriores. Si el óxido ha penetrado cualquier pieza de acero, reemplace esa pieza de inmediato.
- Inspeccione el sistema antes de cada uso para verificar que los elementos de fijación no estén flojos, que no haya desgaste excesivo, inestabilidad ni signos de corrosión. Si encuentra irregularidades, repárelas antes de usar el sistema.
- Nunca juegue con un equipo dañado.
- No use el sistema para levantar ningún objeto. El mecanismo está diseñado para elevar solamente el peso del tablero con el aro. No cuelgue nada de la agarradera, el aro, el tablero ni los brazos de elevación, ya que esto puede dañar el sistema y anular la garantía.

FAUTE DE NE PAS SUIVRE CES AVERTISSEMENTS, VOUS RISQUEZ DE CAUSER DES BLESSURES GRAVES ET/OU DES DOMMAGES À L'ÉQUIPEMENT.

Le propriétaire doit s'assurer que tous les joueurs connaissent et appliquent les règles suivantes afin d'utiliser l'équipement en toute sécurité.

- Ne vous suspendez pas à l'anneau plus que nécessaire pour retrouver votre équilibre ou éviter de blesser les autres joueurs. Relâchez l'anneau aussitôt que possible.
- Lors d'un match, particulièrement dans le cas des smashes, le visage du joueur ne doit pas faire face au panneau, à l'anneau, ni au filet. Le joueur risque de graves blessures si ses dents ou son visage entrent en contact avec le panneau, l'anneau, ou le filet. Les joueurs doivent toujours porter un protège-dents lorsqu'ils jouent.
- Ne glissez pas, ne grimpez pas, et ne jouez pas sur la base ou le poteau.
- Lorsque vous ajustez la hauteur ou l'équipement, gardez vos mains et doigts loin des pièces mobiles.
- N'autorisez pas les enfants à ajuster l'équipement.
- Ne portez pas de bijoux (bagues, montres, colliers, etc.) lorsque vous jouez. Ces objets pourraient s'accrocher au filet.
- Gardez la base du poteau libre de toute matière organique. L'herbe, les déchets, etc. peuvent la corroder et la détériorer.
- Une fois par mois, vérifiez que le poteau et toutes les pièces en métal ne montrent pas de signes de corrosion (rouille, piqûres, écaillage). Enlevez toute la rouille et repeignez complètement avec une peinture pour extérieur. Si la rouille a pénétré une des pièces en acier, vous devrez remplacer immédiatement la pièce en question.
- A chaque fois que vous allez utiliser l'équipement, vérifiez d'abord l'équilibre, la possibilité de pièces desserrées ou usées, la stabilité de l'équipement et tout signe de corrosion ou réparation nécessaire avant utilisation.
- Ne jouez jamais avec un équipement endommagé.
- N'utilisez pas l'équipement pour lever ou soulever quoique ce soit. Son mécanisme a été conçu uniquement pour soutenir le poids du panneau et de l'anneau. N'accrochez rien au manche, à l'anneau, au panneau ni aux leviers sous peine d'endommager l'équipement et d'annuler la garantie.

LIFETIME BASKETBALL EQUIPMENT

5-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of five years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective basketball equipment. If the equipment is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.
3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the net or rim will void this warranty.
4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or
call (800) 225-3865 M-F 8 a.m. to 5 p.m. MST.

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our Web site at www.lifetime.com



www.lifetime.com

***Warranty is only valid in the United States.**